This video demonstrates a procedure to be used only when the Prime Mover's speed display does not match the speed display of the LVDAC- or LVDAM-EMS software. Calibration is not recommended as a regular maintenance service.