

Refrigeration and HVAC

Geothermal Heat Pump Systems

With a regulated temperature of the simulated ground

Job Sheets - Courseware Sample

89952-F0

Order no.: 89952-30
First Edition
Revision level: 04/2015

By the staff of Festo Didactic

© Festo Didactic Ltée/Ltd, Quebec, Canada 2013
Internet: www.festo-didactic.com
e-mail: did@de.festo.com

Printed in Canada
All rights reserved
ISBN 978-2-89640-839-9 (Printed version)
ISBN 978-2-89640-840-5 (CD-ROM)
Legal Deposit – Bibliothèque et Archives nationales du Québec, 2013
Legal Deposit – Library and Archives Canada, 2013

The purchaser shall receive a single right of use which is non-exclusive, non-time-limited and limited geographically to use at the purchaser's site/location as follows.

The purchaser shall be entitled to use the work to train his/her staff at the purchaser's site/location and shall also be entitled to use parts of the copyright material as the basis for the production of his/her own training documentation for the training of his/her staff at the purchaser's site/location with acknowledgement of source and to make copies for this purpose. In the case of schools/technical colleges, training centers, and universities, the right of use shall also include use by school and college students and trainees at the purchaser's site/location for teaching purposes.

The right of use shall in all cases exclude the right to publish the copyright material or to make this available for use on intranet, Internet and LMS platforms and databases such as Moodle, which allow access by a wide variety of users, including those outside of the purchaser's site/location.

Entitlement to other rights relating to reproductions, copies, adaptations, translations, microfilming and transfer to and storage and processing in electronic systems, no matter whether in whole or in part, shall require the prior consent of Festo Didactic GmbH & Co. KG.

Information in this document is subject to change without notice and does not represent a commitment on the part of Festo Didactic. The Festo materials described in this document are furnished under a license agreement or a nondisclosure agreement.

Festo Didactic recognizes product names as trademarks or registered trademarks of their respective holders.

All other trademarks are the property of their respective owners. Other trademarks and trade names may be used in this document to refer to either the entity claiming the marks and names or their products. Festo Didactic disclaims any proprietary interest in trademarks and trade names other than its own.

Safety and Common Symbols

The following safety and common symbols may be used in this manual and on the equipment:

Symbol	Description
	DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
	WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
	CAUTION used without the <i>Caution, risk of danger</i> sign  , indicates a hazard with a potentially hazardous situation which, if not avoided, may result in property damage.
	Caution, risk of electric shock
	Caution, hot surface
	Caution, risk of danger
	Caution, lifting hazard
	Caution, hand entanglement hazard
	Notice, non-ionizing radiation
	Direct current
	Alternating current
	Both direct and alternating current
	Three-phase alternating current

Safety and Common Symbols

Symbol	Description
	Earth (ground) terminal
	Protective conductor terminal
	Frame or chassis terminal
	Equipotentiality
	On (supply)
	Off (supply)
	Equipment protected throughout by double insulation or reinforced insulation
	In position of a bi-stable push control
	Out position of a bi-stable push control

Table of Contents

Preface	VII
About This Manual	IX
To the Instructor	XI
Job Sheet 1 Geothermal Energy	1
Job Sheet 2 The Ground Loop	33
Job Sheet 3 Heat Pump Connections and Interior Piping	59
Job Sheet 4 The Refrigeration Cycle	91
Job Sheet 5 Psychrometrics	121
Job Sheet 6 Geothermal Heat Pumps	149
Job Sheet 7 Heat Exchangers	169
Job Sheet 8 Heat Pump Control and Safety Devices	197
Job Sheet 9 System Characterization	247
Job Sheet 10 Maintenance and Troubleshooting	257
Job Sheet 11 Geothermal Software Design Tools	269
Appendix A Conversion Table	289
Appendix B Pressure-Enthalpy Diagrams	291
Appendix C Psychrometric Charts	293
Appendix D Anemometer Instructions	295
Appendix E Thermo-Fusion Joints on Geothermal Pipes	299
Appendix F Priming Procedures	307

Table of Contents

Appendix G	Maintenance and Water Conditioning	309
Index.....		311

Preface

Geothermal heat pump systems, also known as ground source heat pumps, are among the most energy efficient systems available today for HVAC applications. Depending on geographical location, typical energy savings from a geothermal heat pump system are from 25% to 70%.

The Geothermal Training System, Model 46126, allows you to develop knowledge in heat transfer, refrigeration, and air conditioning. The topics covered in the job sheets are designed to help you gain the skills required during installation, operation, and troubleshooting of geothermal heat pump systems.

The tools and instruments commonly used with geothermal heat pump systems are also introduced and, when applicable, are used during hands-on activities.

We invite readers of this manual to send us their tips, feedback, and suggestions for improving the book.

Please send these to did@de.festo.com.

The authors and Festo Didactic look forward to your comments.

About This Manual

Description

The topics covered in this manual are presented in the form of job sheets. Each job sheet consists of a theoretical section named *Information Job Sheet* followed by a series of tasks required to attain the learning objectives.

This manual is to be used with the Geothermal Training System equipped with two heat pumps (46126-A). The second heat pump is used to maintain the simulated ground at an almost constant temperature.

Safety considerations

Safety symbols that may be used in this manual and on the equipment are listed in the Safety Symbols table at the beginning of the manual.

Safety procedures related to the tasks that you will be asked to perform are indicated in each exercise.

Make sure that you are wearing appropriate protective equipment when performing the tasks. You should never perform a task if you have any reason to think that a manipulation could be dangerous for you or your teammates.

System of Units

Units are expressed using the International System of Units (SI) followed by the units expressed in the U.S. customary system of units (between parentheses).

Most of the components of the geothermal training system are machined using the US customary system of units. The job sheet calculations have been done using both the SI and US customary systems of units. The results in US customary units are shown in parentheses to the right of the SI values.

Appendices

The appendices included in this manual are:

Appendix A - Conversion Table: Factors to apply to convert US customary units to SI units and vice versa.

Appendix B - Pressure-Enthalpy Diagrams: Pressure-enthalpy diagrams of the refrigerant used in the training system.

Appendix C - Psychrometric Charts: Standard air psychrometric charts.

Appendix D - Anemometer Instructions: Operating instructions of the anemometer supplied with the training system.

About This Manual

Appendix E - Thermo-Fusion Joints on Geothermal Pipes: Explains how to make joints on geothermal pipes.

To the Instructor

You will find in this Instructor Guide all the elements included in the Student Manual together with the answers to all questions, results of measurements, graphs, explanations, suggestions, and, in some cases, instructions to help you guide the students through their learning process. All the information that applies to you is placed between markers and appears in red.

Accuracy of measurements

The numerical results of the hands-on exercises may differ from one student to another. For this reason, the results and answers given in this manual should be considered as a guide. Students who correctly performed the exercises should expect to demonstrate the principles involved and make observations and measurements similar to those given as answers.

Sample
Extracted from
the Job Sheets Student
and the Job Sheets Instructor

Heat Exchangers

Heat pumps

Introduction

Heat exchangers are devices that transfer energy from a warmer fluid to a colder one. The role of the exchanger is to optimize the transfer of heat by providing a space where the two fluids interact thermally as much as possible. The fluids do not mix together during the heat exchange process due to a physical barrier between them. The exchanger provides a surface area that allows the heat of the hot fluid to be transferred by conduction to the cold fluid through the thin, heat-conductive walls separating the fluids.

There are different devices that exchange heat that are not strictly considered heat exchangers. In general, devices that mix two fluids at different temperatures are considered mass and heat exchangers. Mixing chambers, such as a kitchen faucet that mixes hot and cold water together, are a good example of such devices. However, we will not discuss such exchangers in this manual.

The heat that is exchanged in a given fluid can be expressed by the following equation:

$$\dot{Q} = \dot{m}c_p(T_{in} - T_{out}) \quad (7-1)$$

- where
- $\dot{Q}$ is the heat flow of the fluid in W (Btu/h)
 - $\dot{m}$ is the mass flow rate of the fluid in kg/s (lbs/h)
 - c_p is the constant pressure specific heat of the fluid (e.g., 4190 J/kg °C (1.00 Btu/lb °F) for water at room temperature) in J/kg·K (Btu/lb·°F)
 - T_{in} is the temperature of the fluid entering the heat exchanger in °C (°F)
 - T_{out} is the temperature of the fluid leaving the heat exchanger in °C (°F)



The fluids in a heat exchanger could be identified by a sub-index such as: "r" for the refrigerant, "w" for water, "h" for the hot fluid, and "c" the cold fluid. The equation for the hot fluid in an exchanger would then become: $\dot{Q}_h = \dot{m}_h c_{p,h} (T_{in,h} - T_{out,h})$.

Configurations of heat exchangers are available for different applications. One of the most common types of exchanger is the coaxial type shown in the bottom of Figure 106. In this exchanger, the fluids travel on the same axis on parallel trajectories. The coaxial type exchanger is used on your training system. Both the desuperheater and the geothermal heat pump ground-loop water/refrigerant heat exchanger are instances of coaxial exchangers.

Another type of heat exchanger is called the cross-flow heat exchanger. In this arrangement, instead of traveling in the same direction, both fluids meet at a ninety degree angle. The air/refrigerant heat exchanger found at the air intake of the heat pump is an example of a cross-flow exchanger.

Heat exchanger analysis

A heat exchanger analysis allows us to determine the amount of heat that is transferred from one fluid to another. A thorough analysis also permits us to determine the temperatures at the inlet and outlet of the fluids under certain conditions.

In a coaxial heat exchanger, fluids exchange heat using one of two flow configurations: the parallel-flow configuration (Figure 106a), where hot and cold fluids enter on the same side of the exchanger, and the counter-flow configuration (Figure 106b), where the fluids enter at opposite sides of the exchanger.

The fluids continue to exchange heat as long as there is a temperature difference between the fluids at a given position in the exchanger.

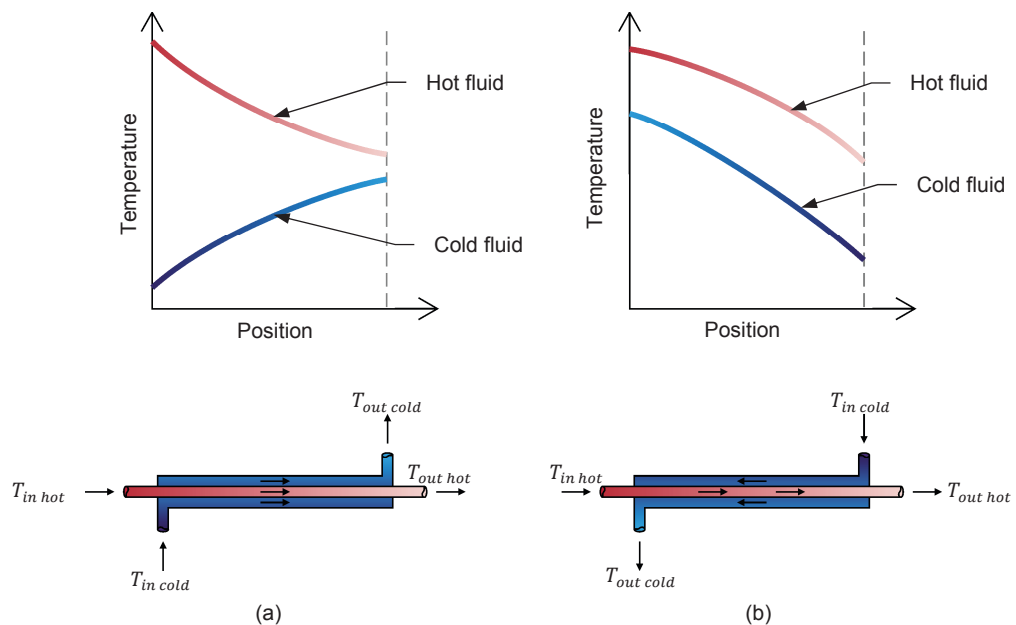


Figure 106. Heat exchanger flow.

Figure 106 shows that, when the flows are parallel, the temperatures of the hot and cold fluids merge until they either reach the same temperature or they exit the exchanger. When the fluids are flowing in a counter-flow configuration, the temperature lines have a tendency to "follow each other". Note that in the counter-flow configuration, the output temperature of the hot fluid can be colder than the output temperature of the cold water as shown in Figure 106b.

Several different heat exchangers play major roles in the geothermal heat pump HVAC installations.

- The ground loop is a heat exchanger that transfers heat between the thermal fluid and the ground.
- The **coaxial heat exchanger** in the heat pump exchanges heat between the ground loop and the refrigerant.
 - When the heat pump is set to work in heating mode, this exchanger works as an evaporator. The refrigerant evaporates as it takes the energy from the ground.
 - When the heat pump is working in cooling mode, the heat exchanger works as a condenser. As the refrigerant transfers heat to the ground, it is cooled and condensed into a liquid during the process.

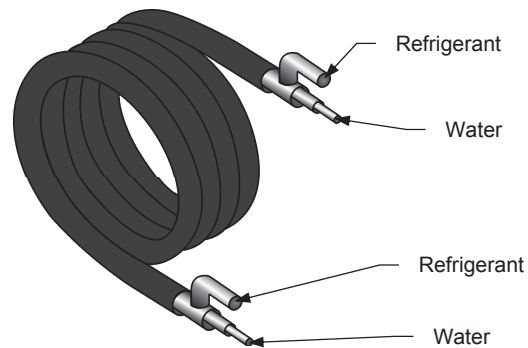


Figure 107. Coaxial heat exchanger.

- The desuperheater heat exchanger is a counter-flow heat exchanger. It exchanges heat from the refrigerant as it exits the compressor to the water in a domestic hot water (DHW) tank.
- The heat pump forced-air coil exchanges heat to warm the air when heating is needed. It can also cool and dehumidify the air when air conditioning is needed. In this case, the heat extraction cools the air and condensates the water. The air cooling and the water condensation have to be taken into account if an energy balance is performed.

The heat exchangers in a heat pump may work in counter-flow or parallel-flow mode, depending on the mode of operation (heating or cooling mode).

The evaporator and condenser coils

When a change in matter occurs inside a heat exchanger, latent heat is transferred. As long as only latent heat is exchanged, the fluid that condensates or evaporates stays at the same temperature from the inlet to the outlet.

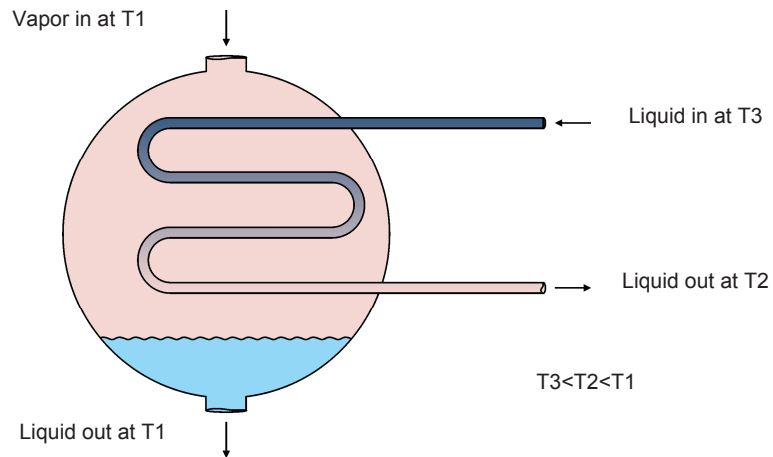


Figure 108. Condensation.

As shown in Figure 108, when condensation occurs in a heat exchanger, the temperature of the condensing fluid remains constant; but its state changes from vapor to liquid as it loses latent heat. The other fluid involved in the heat exchange gains sensible heat and its temperature rises. The state of the second fluid remains the same unless it reaches a state-change temperature (e.g., its boiling point).

When a fluid condensates on one side of the heat exchanger, the fluid on the other side absorbs heat and increases its temperature.

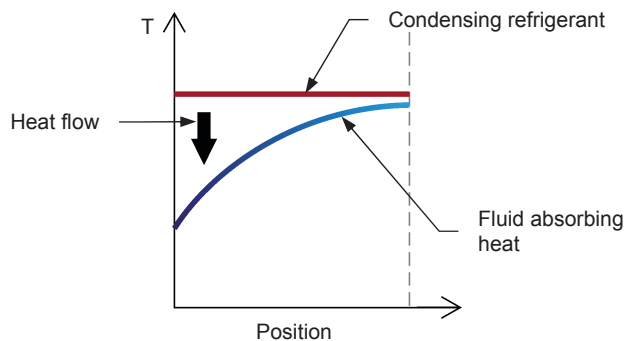


Figure 109. Condensation.

On the other hand, when a fluid is boiling on one side of the evaporator, the fluid on the other side cools down and releases energy.

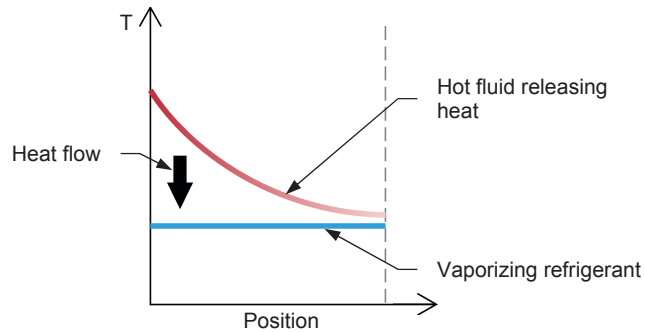


Figure 110. Vaporization.

In a typical heat pump, one of the flowing fluids is a refrigerant while the other fluid is either simple water or a water/antifreeze solution. Heat exchangers may work in parallel-flow or counter-flow and as either evaporators or condensers. This versatility of the heat exchanger is possible by using different valves to control the fluid flows. However, it makes this kind of heat exchangers more difficult to understand and the calculations are slightly less tractable.

The heat flow entering (evaporation) or leaving (condensation) the fluid undergoing a change of state is expressed by the equation:

$$\dot{Q} = \dot{m} \cdot h_{fg} \quad (7-2)$$

where

$\dot{Q}$	is the heat flow in W (Btu/h)
$\dot{m}$	is the mass flow rate of the fluid in kg/s (lb/h)
h_{fg}	is the enthalpy of vaporization or condensation in J/kg (Btu/lb)



The f and g indices in the h_{fg} variable refer to fluid and gas respectively. This indicates that the enthalpy refers to the vaporization/condensation.

In a typical installation, the analysis of Equation (7-1) and Equation (7-2) must be combined to reflect the multiple mechanisms at work in a geothermal heat exchanger.

The effectiveness of a heat exchanger

The effectiveness of a heat exchanger can be calculated as:

$$\epsilon = \frac{\dot{Q}}{\dot{Q}_{max}} \quad (7-3)$$

where

ϵ	is the effectiveness, a dimensional number such that $0 \leq \epsilon \leq 1$
$\dot{Q}$	is the heat flow taking place in the exchanger in W (Btu/h)
$\dot{Q}_{max}$	is the maximum heat transfer possible for the fluid parameters in W (Btu/h)

The maximum amount of heat transfer occurs when the temperature of the hot fluid drops to the temperature of the cold fluid at its inlet, or when the cold fluid reaches the temperature of the hot fluid at its inlet.

To compare the amount of heat each fluid is handling, we need to calculate the heat capacity of each fluid.

$$C_c = \dot{m}_c \cdot c_{p,c} \quad (7-4)$$

where C_c is the cold fluid heat capacity rate in W/°C (Btu/h·°F)
 $\dot{m}_c$ is the mass flow rate of the cold fluid in kg/s (lb/h)
 $c_{p,c}$ is the cold fluid specific heat in J/kg·°C (Btu/lb·°F)

$$C_h = \dot{m}_h \cdot c_{p,h} \quad (7-5)$$

where C_h is the hot fluid heat capacity rate in W/°C (Btu/h·°F)
 $\dot{m}_h$ is the mass flow rate of the hot fluid in kg/s (lb/h)
 $c_{p,h}$ is the hot fluid specific heat in J/kg·°C (Btu/lb·°F)

Keep the smallest value between C_c and C_h ($C_{min} = \min(C_c, C_h)$) and replace it in the following equation to obtain the maximum heat transfer:

$$\dot{Q}_{max} = C_{min} \cdot (T_{in,h} - T_{in,c}) \quad (7-6)$$

where $\dot{Q}_{max}$ is the maximum heat transfer possible in W (Btu/h)
 C_{min} is the minimum specific heat from the fluids in W/°C (Btu/h·°F)
 $T_{in,h}$ is the temperature of the hot fluid entering the heat exchanger in °C (°F)
 $T_{in,c}$ is the temperature of the cold fluid entering the heat exchanger in °C (°F)

The desuperheater

The **desuperheater** is a heat exchanger that extracts the sensible superheat stored in the refrigerant after the compression process. In the geothermal heat pump, the desuperheater is used to warm the water in a domestic hot water tank (DHW). This "free" energy saves part of the electric work that would otherwise be required to rise the water temperature in the tank.

The energy transferred to the water by the desuperheater is shown as a blue segment in Figure 111.

Formally, in SI units, the c_p would be expressed in units of J/kg·K, where K is the Kelvin temperature unit. This would imply the use of temperatures in K instead of °C in the equations in this page. However, temperatures differences in °C and K are the same, making this distinction irrelevant to our needs.

$$T [K] = T [°C] + 273.15$$

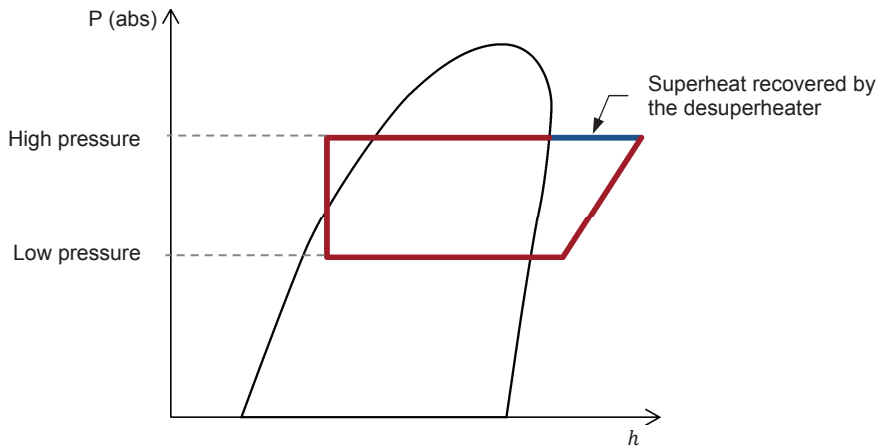


Figure 111. Desuperheater graph.

A double-tube heat exchanger is installed between the compressor exit and the four-way valve to transfer the superheat to the domestic hot water tank.

The goal of this heat exchanger is to cool down the superheated refrigerant as it exits the compressor to a temperature that is only slightly above the saturation temperature.

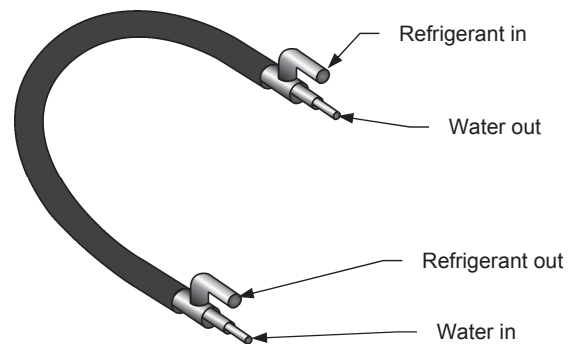


Figure 112. Desuperheater.

The pump that circulates the water through the desuperheater should work only when the temperature of the water in the tank is lower than the saturation temperature. The refrigerant should transfer heat to the water, but the water should never transfer heat to the refrigerant. If heat is transferred to the refrigerant, the pressure increases at the compressor exit, making the system less efficient.

In heating mode, the desuperheater circulation pump is usually turned off allowing all the available heat to warm the house.

Thermal efficiency

The ratio between the heat output and the heat input of any device is the theoretical **thermal efficiency**.

$$\eta_{th} = \frac{Q_{out}}{Q_{in}} \quad (7-7)$$

From the first law of thermodynamics, the energy output of a closed system cannot exceed its input. Consequently, the thermal efficiency is always in the range between:

$$0 \leq \eta_{th} \leq 1$$

When expressed as a percentage, the thermal efficiency must be between 0% and 100%. Due to inefficiencies, such as friction, heat loss, and other factors, the efficiency of any real-world thermal engine is typically much less than 100%.

Heat Exchangers

OBJECTIVES

In this job sheet, you will determine the refrigerant mass flow rate circulating in the heat pump. You will also calibrate the water flow in the desuperheater to heat water in the domestic hot water tank (DHW) using the sensible heat from the hot, superheated refrigerant. You will determine the amount of money that could be saved with the use of a desuperheater.

PROCEDURE

1. Perform the following settings on your training system.

Main power switch	On
Thermostat.....	Off
Valve HV-1.....	Open
Valve HV-2.....	Open
Valve HV-3.....	Open
Valve HV-4.....	Open
Valve HV-5.....	Open
Valve HV-6.....	Open
Valve HV-7.....	Open
Valve HV-8.....	Closed
Valve HV-9.....	No adjustments required
Valve HV-10.....	Handle in horizontal position
Valve HV-11.....	Open
Valve HV-12.....	Open
Valve HV-13.....	Open
Pressure gauge PI-1 selector switch.....	Right
Pressure gauge PI-2 selector switch.....	Right
Desuperheater On/Off switch.....	On
Priming tank three-way valves	
Pumping station three-way valves.....	
Air distribution register	Open

Perform the following settings on the simulated ground heat pump:

Main power switch (simulated ground heat pump)	On
Temperature controller set point	3°C (5°F) below ground temperature

Wait for the compressor of the simulated ground heat pump to start and then wait about 5 min for the temperature of the water in the tank to get close to its set point.

2. Next, perform the following settings on the heat pump:

Thermostat.....Heating mode

Temperature set point5°C (9°F) above room temperature

3. Turn the valve HV-10 to the vertical position.
4. When the desuperheater indicator light turns on, adjust valve HV-9 to obtain a flow (FI-4) of 2 L/min (0.6 gal/min).
5. Locate the desuperheater heat exchanger on your training system. Complete Table 29 using the following labels: Refrigerant out, Water in, Water out, and Desuperheater pump.

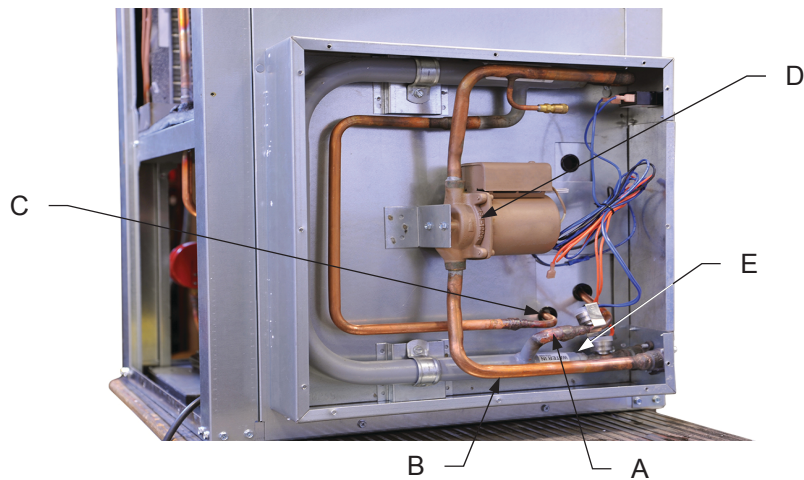


Figure 113. Desuperheater.

Table 29. Desuperheater element identification.

Location	Name
A	
B	
C	Refrigerant in
D	
E	



The domestic hot water tank of your training system has a capacity of 9.5 L (2.5 gal).

Table 29. Desuperheater element identification.

Location	Name
A	Refrigerant out
B	Water in
C	Refrigerant in
D	Desuperheater pump
E	Water out

6. What type of configuration (parallel-flow or counter-flow) is used for the heat exchanger of the desuperheater?

The heat exchanger of the desuperheater uses the counter-flow configuration.

7. Turn valve HV-10 to the horizontal position.

8. Measure the temperatures and pressures shown in Table 30. Wait for fifteen minutes and repeat your measurements. Complete Table 30.

Table 30. Domestic hot water data.

	$t_{0 \text{ min}}$	$t_{15 \text{ min}}$
T_{TC-8}		
T_{TC-9}		
T_{TC-10}		
T_{TC-11}		
T_{TC-15}		
T_{TC-16}		
LP		
HP		

Table 30. DHW data (SI units).

	$t_{0 \text{ min}}$	$t_{15 \text{ min}}$
$T_{TC-8} (^{\circ}\text{C})$	8.5	3.4
$T_{TC-9} (^{\circ}\text{C})$	67.4	69.7
$T_{TC-10} (^{\circ}\text{C})$	42.1	46.9
$T_{TC-11} (^{\circ}\text{C})$	32.9	31.1
$T_{TC-15} (^{\circ}\text{C})$	21.4	36.5
$T_{TC-16} (^{\circ}\text{C})$	26.5	39.4
LP (bar)	8.3	7.0
HP (bar)	24.0	24.0

Table 30. DHW data (US customary units).

	$t_{0 \text{ min}}$	$t_{15 \text{ min}}$
$T_{TC-8} (^{\circ}\text{F})$	47	40
$T_{TC-9} (^{\circ}\text{F})$	130	153
$T_{TC-10} (^{\circ}\text{F})$	109	111.6
$T_{TC-11} (^{\circ}\text{F})$	95.8	89.3
$T_{TC-15} (^{\circ}\text{F})$	68.6	89.7
$T_{TC-16} (^{\circ}\text{F})$	87.7	95.9
LP (psia)	125	110
HP (psia)	350	375

9. Using a pressure-enthalpy diagram included at the end of this job sheet, find the saturation temperature T_{sat} for the value of HP found after fifteen minutes (remember that HP is a gauge pressure).

Saturation temperature T_{sat} : _____

Saturation temperature (T_{sat}): 40°C (115°F)

10. Turn valve HV-10 to the vertical position and let the water run for one minute. Turn valve HV-10 to the horizontal position and measure TC-10.

Temperature measured by TC-10: _____

Temperature measured at TC-10: 46.9°C (111.6°F)

The temperature must be adjusted to 42°C (119°F) for the operating conditions of the system given in this example. Results may vary.

11. Next, adjust valve HV-9 to obtain a temperature measured by TC-10 that is 2°C (4°F) over the saturation temperature found in step 0.

Set the thermostat operating mode to Off.

12. Calculate the energy gained by the water from $t_{0\ min}$ to $t_{15\ min}$ using Equation (7-8) and the temperatures measured at TC-15:

$$Q = m_w c_{p,w} (T_{15\ min} - T_{0\ min}) \quad (7-8)$$

where	Q	is the heat gained by the water in J (Btu)
	m_w	is the mass of water in kg (lb) A 9.5 liter (2.5 gallon) water heater corresponds to 9.5 kg (20.875 lb) of water.
	$c_{p,w}$	is the constant pressure specific heat of water in J/kg·°C (Btu/lb·°F)
	$T_{15\ min}$	is the temperature of the water after fifteen minutes of running the system in °C (°F)
	$T_{0\ min}$	is the temperature of water at the beginning of the experiment in °C (°F)

SI units

$$Q = 9.5 \times 4.18 \times (36.5 - 21.4) = 599.6\ \text{kJ}$$

US customary units

$$Q = 20.875 \times 1.0 \times (89.7 - 68.6) = 440.5\ \text{Btu}$$

- 13.** The heat flow rate of the process corresponds to the total heat gained by the water in the tank (calculated in step 12) divided by the number of seconds in fifteen minutes or 0.25 hours.

$$\dot{Q}_w = \frac{Q_w}{t} \quad (7-9)$$

where $\dot{Q}_w$ is the heat flow rate in W (Btu/h)
 Q_w is the total heat gained by water in J (Btu)
 t is the time elapsed in seconds (SI units) or hours (US units)

Calculate the heat flow rate of the process:

SI units

$$\text{Heat flow rate of the process} = \dot{Q} = \frac{599.6 \text{ kJ}}{15 \text{ min} \times 60 \text{ s/min}} = \frac{599.6}{900} = 0.666 \text{ kW}$$

US customary units


$$\text{Heat flow of the process} = \dot{Q} = \frac{440.5 \text{ Btu}}{0.25 \text{ h}} = 440.5 \times 4 = 1762 \text{ Btu/h}$$

- 14.** Plot the compression cycle in a pressure-enthalpy diagram (Figure 118 or Figure 119) and fill in Table 31.

Table 31. Temperature-enthalpy.

	Enthalpy
TC-9 _{15 min}	
TC-10 _{15 min}	

The compression cycle is given in the graph below.

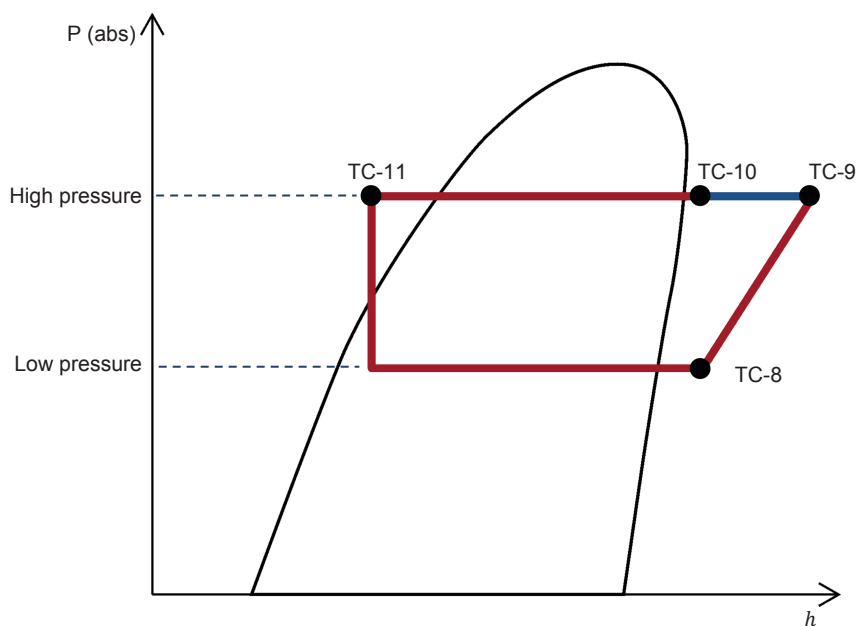

Compression cycle.

Table 31. Temperature-enthalpy (SI units).

	Enthalpy (kJ/kg)
TC – 9 _{15 min}	470
TC – 10 _{15 min}	438

Table 31. Temperature-enthalpy (US customary units).

	Enthalpy (Btu/lb)
TC – 9 _{15 min}	136
TC – 10 _{15 min}	123

15. Locate the TC-10 point on the pressure-enthalpy diagram. Is the desuperheater working in its ideal range of operation? Why?

No. To be in its ideal range, the desuperheater should operate in such a way that the TC-10 point is located precisely on the boundary of sensible enthalpy for the gaseous state. The actual position of TC-10 is slightly to the right of the boundary.

16. What would be the effect on the temperature read by TC-10 if you were to modify the desuperheater flow rate?

Increasing the flow rate into the desuperheater would move the TC-10 point to the left, eventually past the boundary and into the latent enthalpy region of the cycle. Decreasing the flow rate would move the TC-10 point to the right, leaving more heat available to heat the room.

17. Explain why it is preferable that the temperature at TC-10 does not drop below the saturation temperature?

If TC-10 drops below the saturation pressure, too much heat is transferred to the DHW. This does not have much impact if the system is in cooling mode. However, in heating mode, the system may simply be unable to heat the house as needed.

18. To calculate the refrigerant mass flow that circulates, compare the heat flow absorbed by the water with the enthalpy difference corresponding to the temperatures $TC - 9_{15 \text{ min}}$ and $TC - 10_{15 \text{ min}}$.

$$\dot{m}_r = \frac{\dot{Q}_w}{(h_{TC-9} - h_{TC-10})} \quad (7-10)$$

where $\dot{Q}_w$ is the water heat flow in W (Btu/h) measured in step 13
 $\dot{m}_r$ is the refrigerant mass flow rate in kg/s (lbs/h)
 h_{TC-10} is the enthalpy corresponding to TC-10 in J/kg (Btu/lb)
 h_{TC-9} is the enthalpy corresponding to TC-9 in J/kg (Btu/lb)

SI units

$$\dot{m}_r = \frac{\dot{Q}_w}{(h_{TC-9} - h_{TC-10})} = \frac{0.666}{470 - 438} = 0.0208 \text{ kg/s}$$

US customary units

$$\dot{m}_r = \frac{\dot{Q}_w}{(h_{TC-9} - h_{TC-10})} = \frac{1762}{136 - 123} = 135.5 \text{ lb/hour}$$

- 19.** Calculate the amount of money the desuperheater saves in heating costs for one hour of continuous work. Assume one kWh costs \$0.08 (U.S.).

 Electric work (W_e) = $\dot{m}_r(h_{TC-9} - h_{TC-10}) = \dot{Q}_w$.

SI units

$$W_e = \dot{Q}_w = 0.666 \text{ kW}$$

$$\text{Savings} = 0.666 \text{ kW} \times 0.08 \frac{\$}{\text{kWh}} = 0.053 \$ \text{ per hour}$$

US customary units

$$W_e = \dot{Q}_w = 1762 \text{ Btu/h} = 1762 \text{ Btu/h} \div 3.413 \text{ Btu/h} \cdot \text{W} = 0.516 \text{ kW}$$

$$\text{Savings} = 0.516 \text{ kW} \times 0.08 \frac{\$}{\text{kWh}} = 0.041 \$ \text{ per hour}$$

Coaxial coil heat exchanger

The following exercise is optional and explores the characteristics of the heat pump coaxial heat exchanger. You will calculate the refrigerant mass flow using the coaxial heat exchanger in heating mode and in cooling mode. You will also determine how the heat exchanger works in each mode.

- 20.** Perform the following adjustments to the settings of your training system. Leave the simulated ground heat pump running.

Main power switch.....	On
Thermostat.....	Heating mode
Temperature set point	5°C (9°F) above room temperature
Valve HV-1	Open
Valve HV-2	Open
Valve HV-3	Open
Valve HV-4	Open
Valve HV-5	Open
Valve HV-6	Open
Valve HV-7	Open
Valve HV-8	Closed
Valve HV-9	No adjustments required
Valve HV-10	Handle in horizontal position
Valve HV-11	Open
Valve HV-12	Open
Valve HV-13	Open
Pressure gauge PI-1 selector switch	Right
Pressure gauge PI-2 selector switch	Right
Desuperheater On/Off switch	Off
Priming tank three-way valves.....	
Pumping station three-way valves.....	
Air distribution register.....	Open

21. Allow your training system to run for ten minutes. Complete Table 32.

Table 32. Temperature, pressure, and flow in heating mode.

T_{TC-8}	
T_{TC-12}	
T_{TC-13}	
T_{TC-14}	
LP	
Ground loop water flow	

Table 32. Temperature, pressure, and flow in heating mode (SI units).

T_{TC-8} (°C)	16
T_{TC-12} (°C)	14.2
T_{TC-13} (°C)	22.1
T_{TC-14} (°C)	18.4
LP (bar)	10.6
Ground loop water flow (L/min)	11

Table 32. Temperature, pressure, and flow in heating mode (US customary units).

T_{TC-8} (°F)	60.8
T_{TC-12} (°F)	57.6
T_{TC-13} (°F)	71.8
T_{TC-14} (°F)	65.1
LP (psi)	154
Ground loop water flow (gal/min)	2.9

22. Fill in the blanks with your temperature readings and draw arrows to show the fluid flow in Figure 114.

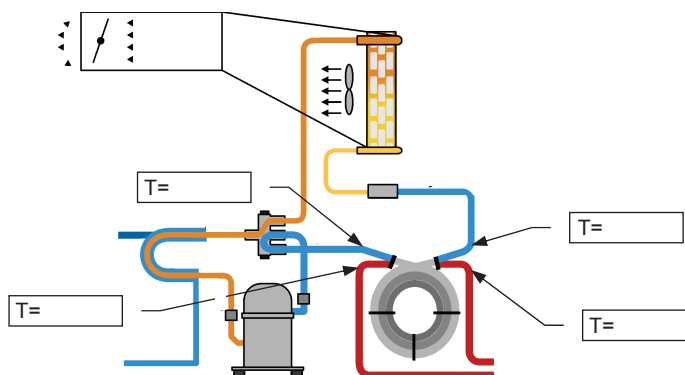


Figure 114. Heating mode heat exchanger analysis.

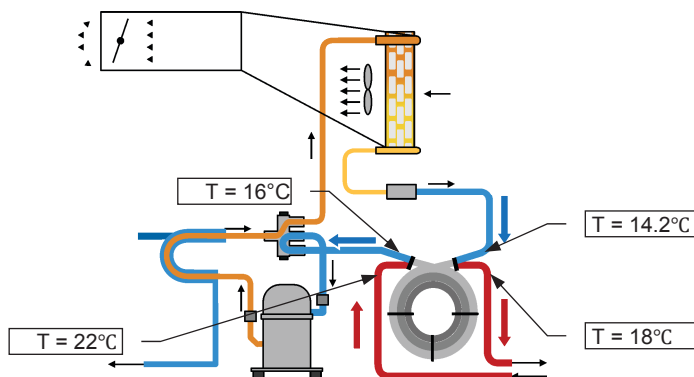


Figure 114. Heating mode heat exchange analysis.

23. Plot a simple graph to show how the temperature of each fluid varies as they flow through the system (as shown in Figure 110).

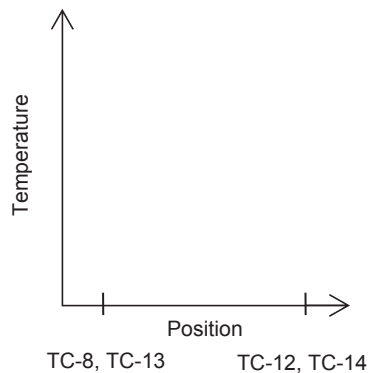


Figure 115. Heat exchanger temperature tendency in heating mode.

The evolution of the temperature looks like this in the exchanger

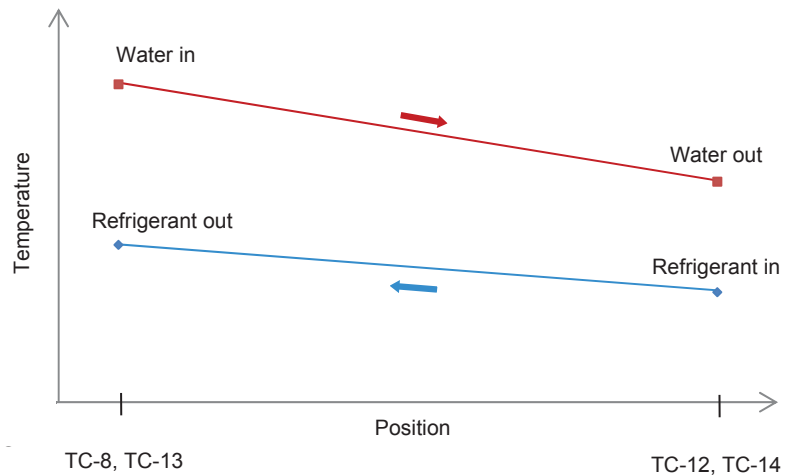


Figure 115. Heat exchanger temperature tendency in heating mode.

24. In heating mode, does the heat exchanger work in parallel-flow or counter-flow mode?

The heat exchanger works in counter-flow mode.

25. Is the heat exchanger working as an evaporator or a condenser?

The heat exchanger works as an evaporator.

26. Perform the following adjustments to your training system. Leave the simulated ground heat pump running.

- Main power switch..... On
- Thermostat Cooling mode
- Temperature set point 5°C (9°F) below room temperature
- Valve HV-1 Open
- Valve HV-2 Open
- Valve HV-3 Open
- Valve HV-4 Open
- Valve HV-5 Open
- Valve HV-6 Open
- Valve HV-7 Open
- Valve HV-8 Closed
- Valve HV-9 No adjustments required
- Valve HV-10Handle in horizontal position
- Valve HV-11 Open
- Valve HV-12 Open
- Valve HV-13 Open
- Pressure gauge PI-1 selector switchRight
- Pressure gauge PI-2 selector switchRight
- Desuperheater On/Off switch Off
- Priming tank three-way valves.....
- Pumping station three-way valves
- Air distribution register..... Open

27. Allow your training system to run for ten minutes. Complete Table 33.

Table 33. Temperature, pressure, and flow in cooling mode.

T_{TC-10}	
T_{TC-12}	
T_{TC-13}	
T_{TC-14}	
HP	
Ground loop water flow	

Table 33. Cooling mode (SI units).

T_{TC-10} (°C)	35.2
T_{TC-12} (°C)	32.9
T_{TC-13} (°C)	28.6
T_{TC-14} (°C)	32.2
HP (bar)	20
Ground loop water flow (L/min)	11

Table 33. Cooling mode (US customary units).

T_{TC-10} (°F)	95.4
T_{TC-12} (°F)	91.2
T_{TC-13} (°F)	83.5
T_{TC-14} (°F)	90.0
HP (psi)	290
Ground loop water flow (gal/min)	2.9

28. Set the thermostat operating mode to Off, then shut down your training system by setting both main power switches to Off.
29. Complete the next figure by filling the measured temperatures in the blanks and draw arrows to show the fluid flows.

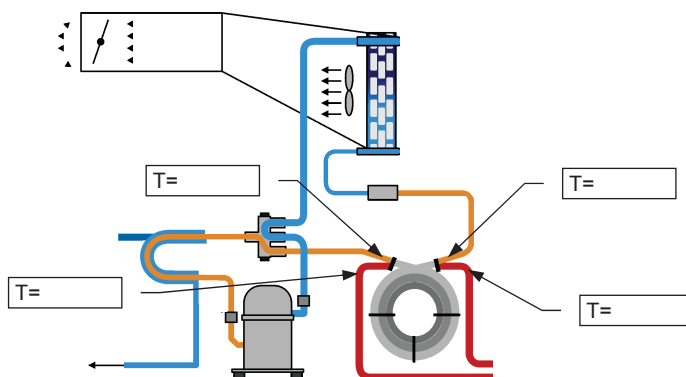


Figure 116. Cooling mode heat exchange analysis.

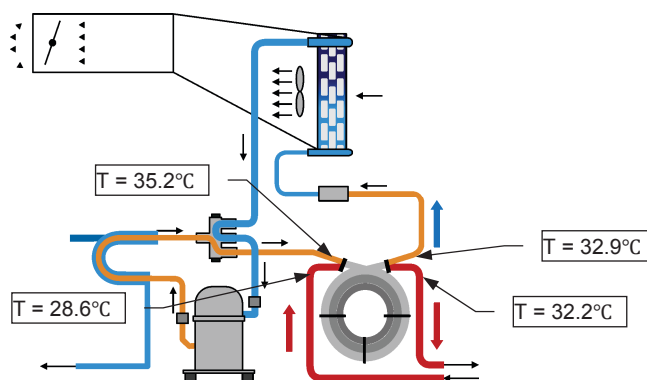


Figure 116. Cooling mode heat exchange analysis.

- 30.** Plot a simple graph to show the drop in temperature as the fluid progresses in the heat exchanger (Use Figure 109 as a reference).

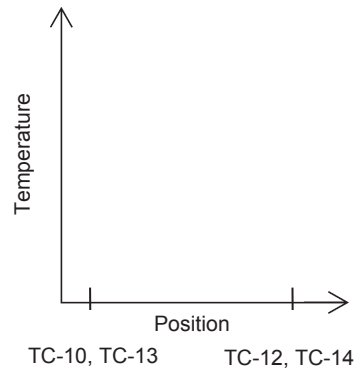


Figure 117. Heat exchanger temperature tendency in cooling mode.

The evolution of the temperature looks like this in the exchanger:

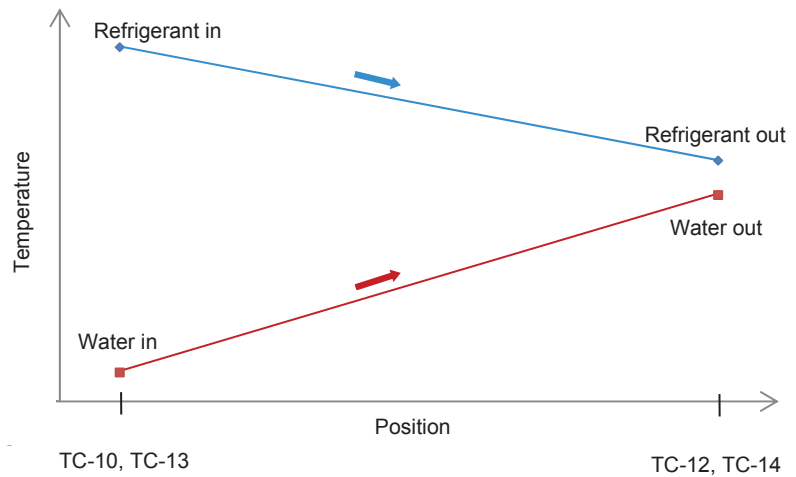


Figure 117. Heat exchanger temperature tendency in cooling mode.

- 31.** In cooling mode, does the heat exchanger work in parallel-flow or counter-flow mode?

The heat exchanger works in parallel-flow mode.

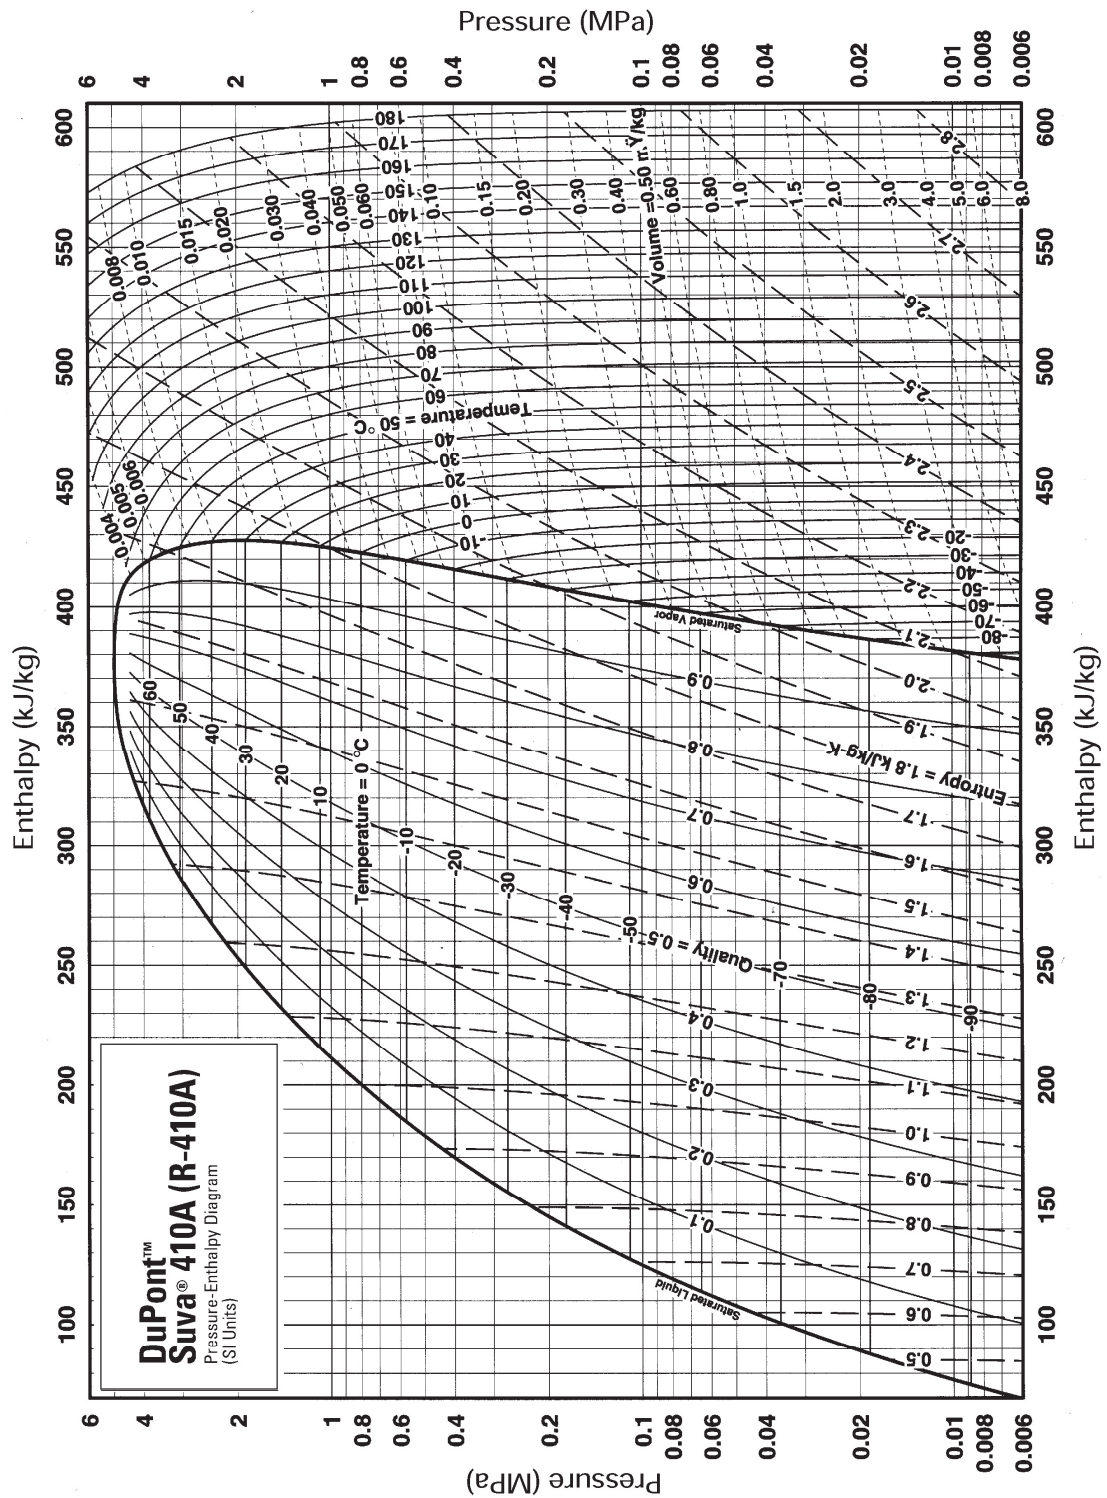


Figure 118. Pressure enthalpy diagram, SI units.

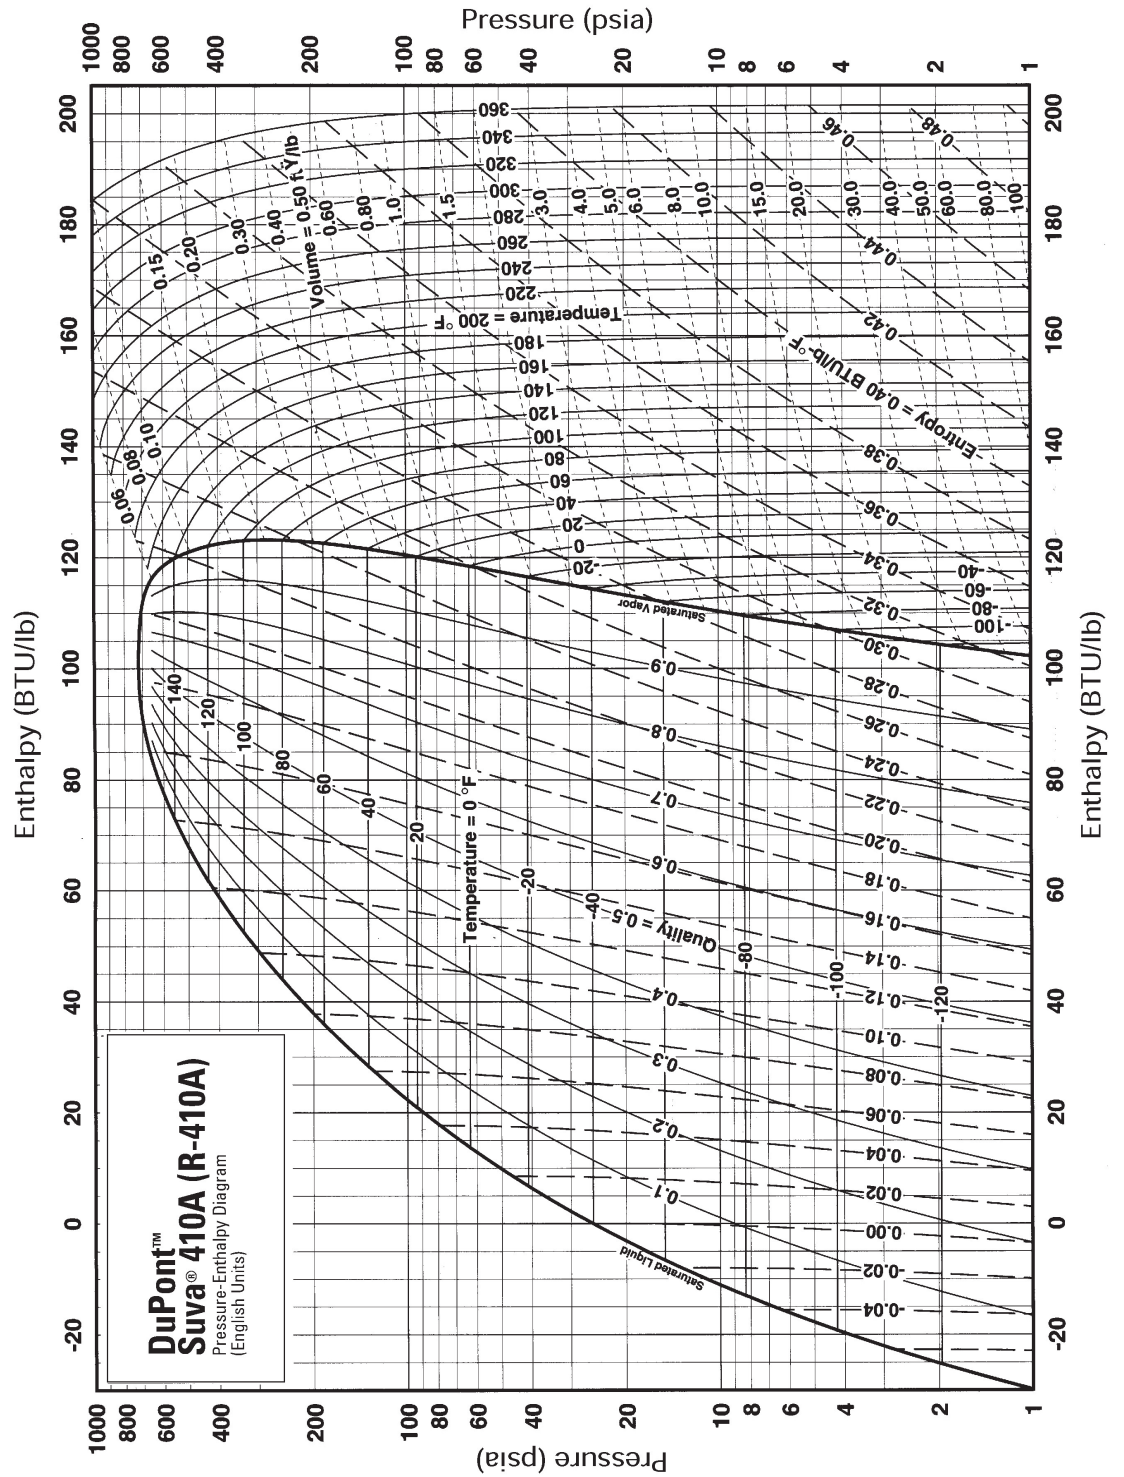


Figure 119. Pressure enthalpy diagram, English units.

Name: _____ Date: _____

Instructor's approval: _____