


Standard Functions (computer-based control) Set 581437 (8968-20)



LabVolt Series

Datasheet

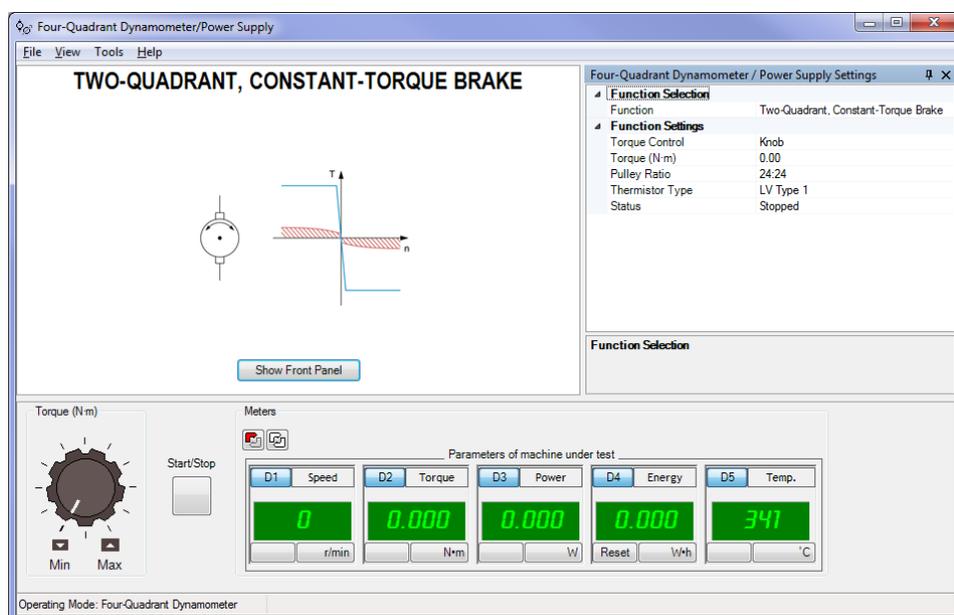

* The product images shown in this document are for illustration purposes; actual products may vary. Please refer to the Specifications section of each product/item for all details. Festo Didactic reserves the right to change product images and specifications at any time without notice.

Table of Contents

General Description _____	3
Specifications _____	3

General Description

The Standard Functions (computer-based control) Set is a package of control functions that can be activated in the Four-Quadrant Dynamometer/Power Supply, enabling the module to perform a wide variety of functions in each of its two operating modes (Dynamometer and Power Supply).

The set allows only computer-based control of the functions. This means that the function performed by the Four-Quadrant Dynamometer/Power Supply is selected, set, and monitored using the LVDAC-EMS software. The following control functions are available in the set:

Dynamometer operating mode

- Two-Quadrant, Constant-Torque Brake
- Clockwise Prime Mover/Brake
- Counterclockwise Prime Mover/Brake
- Clockwise Constant-Speed Prime Mover/Brake
- Counterclockwise Constant-Speed Prime Mover/Brake
- Positive Constant-Torque Prime Mover/Brake
- Negative Constant-Torque Prime Mover/Brake
- Four-Quadrant Constant-Speed Prime Mover/Brake
- Speed Sweep

Power Supply operating mode

- Positive Voltage Source
- Negative Voltage Source
- DC Voltage Source
- Positive Current Source
- Negative Current Source
- DC Current Source
- 50 Hz Power Source
- 60 Hz Power Source
- AC Power Source
- Lead-Acid Battery Float Charger

Specifications

Parameter	Value
Control Functions	
Control Functions	Two-Quadrant, Constant-Torque Brake
	Clockwise Prime Mover/Brake
	Counterclockwise Prime Mover/Brake
	Clockwise Constant-Speed Prime Mover/Brake
	Counterclockwise Constant-Speed Prime Mover/Brake
	Positive Constant-Torque Prime Mover/Brake
	Negative Constant-Torque Prime Mover/Brake
	Four-Quadrant, Constant-Speed Prime Mover/Brake
	Speed Sweep
	Mechanical Load

Parameter	Value
	Positive Voltage Source
	Negative Voltage Source
	DC Voltage Source
	Positive Current Source
	Negative Current Source
	DC Current Source
	50 Hz Power Source
	60 Hz Power Source
	AC Power Source
	Lead-Acid Battery Float Charger
Two-Quadrant, Constant-Torque Brake	
Torque Control	Software knob, 8960 module knob, or 8960 command input
Torque	0-3 N·m (26.55 lbf-in)
Pulley Ratio	24:24, 24:12, or 24:32
Clockwise/Counterclockwise Prime Mover/Brake	
Speed Control	Software knob, 8960 module knob, or 8960 command input
Speed	0-2500 r/min
Pulley Ratio	24:24, 24:12, or 24:32
Clockwise/Counterclockwise Constant-Speed Prime Mover/Brake	
Speed Control	Software knob, 8960 module knob, or 8960 command input
Speed	0-2500 r/min
Pulley Ratio	24:24, 24:12, or 24:32
Positive/Negative Constant-Torque Prime Mover/Brake	
Torque Control	Software knob, 8960 module knob, or 8960 command input
Torque	0-3 N·m (26.55 lbf-in)
Pulley Ratio	24:24, 24:12, or 24:32
Four-Quadrant, Constant-Speed Prime Mover/Brake	
Speed Control	Software knob, 8960 module knob, or 8960 command input
Speed	0-2500 r/min
Pulley Ratio	24:24, 24:12, or 24:32
Speed Sweep	
Start Speed	-3000 r/min to 3000 r/min
Finish Speed	-3000 r/min to 3000 r/min
Number of Steps	0-50 steps
Step Duration	2-10 s
Record Data to Table	Yes or no
Pulley Ratio	24:24, 24:12, or 24:32
Mechanical Load	
Load Type	Flywheel, fan, grinder, conveyor, calender, crane, user defined
Inertia	0.005-1 kg·m ² (0.119-23.73 lb-ft ²)
Friction Torque	0.05-3 N·m (0.44-26.55 lbf-in)
Pulley Ratio	24:24, 24:12, or 24:32
Positive/Negative Voltage Source	
Voltage Control	Software knob, 8960 module knob, or 8960 command input
Voltage	0 V to 147 V / -147 V to 0 V
DC Voltage Source	
Voltage Control	Software knob, 8960 module knob, or 8960 command input
Voltage	-147 V to 147 V
Positive/Negative Current Source	
Current Control	Software knob, 8960 module knob, or 8960 command input
Current	0 A to 5 A / -5 A to 0 A
DC Current Source	
Current Control	Software knob, 8960 module knob, or 8960 command input
Current	-5 A to 5 A
50 Hz/60 Hz Power Source	
Voltage Control	Software knob, 8960 module knob, or 8960 command input
No-Load Voltage	0-140 V
AC Power Source	

Parameter	Value
No-Load Voltage	0-140 V
DC Offset Correction	-1000 to 1000
Frequency	10-100 Hz
Lead-Acid Battery Float Charger	
Float Voltage	0-150 V

Reflecting the commitment of Festo Didactic to high quality standards in product, design, development, production, installation, and service, our manufacturing and distribution facility has received the ISO 9001 certification.

Festo Didactic reserves the right to make product improvements at any time and without notice and is not responsible for typographical errors. Festo Didactic recognizes all product names used herein as trademarks or registered trademarks of their respective holders. © Festo Didactic Inc. 2024. All rights reserved.

Festo Didactic SE

Rechbergstrasse 3
73770 Denkendorf
Germany

P. +49(0)711/3467-0
F. +49(0)711/347-54-88500

Festo Didactic Inc.

607 Industrial Way West
Eatontown, NJ 07724
United States

P. +1-732-938-2000
F. +1-732-774-8573

Festo Didactic Ltée/Ltd

675 rue du Carbone
Québec QC G2N 2K7
Canada

P. +1-418-849-1000
F. +1-418-849-1666

www.labvolt.com

www.festo-didactic.com